



IR Function:

HOW TO SET UP THE URC by entering Device Code (Note: URC = Universal Remote Control)

- 1 You may setup the URC by following the code entering instructions.
- 2 Referring to the DEVICE CODE LIST, look up the 3-digit Device Code which corresponds to the brand of your TV.
If there is more than one Device Code listed under your brand, start from the first code.
- 3 Hold down "POWER" and "VOL+" on the URC simultaneously for 2 seconds until the indicator lights up.
- 4 Use the number keys 0-9 to enter your 3 digit Device Code. The indicator should go out immediately.
- 5 Turn on your device (TV), then try the function keys (Power/ V-/ V+/ 0-9) on the URC. If your device responds to your activated function correctly, you have entered the right Device Code. Otherwise, repeat the above step with the next available Device Codes until your device responds to your activated function, and most keys work correctly.

TV BRAND	CODES								
Hitachi	031	211	381	081	571	541	251	041	
JVC	261	251	171	341	501				
LG	061	571	541	461	271	081	381		
Magnavox	211	201	831	511	491	151	131	121	001
Mitsubishi	321	311	301	271	061	681	661	571	
Panasonic	221	231	241	771	141				
Philips	201	211	331	421	371	491	131	121	641
	571	521							
Philips-Magnavox	211	511	001						
Pioneer	041	741	691	061					
RCA	281	051	351	531	411	171	161	081	171
	061	041	021	011	001	721	751		
Samsung	171	811	701	631	781	591	581	271	141
	011								
Sharp	061	001	791	731					
Sony	011								
Sylvania	181	131	531	461	521	491	481	381	211
	191	121							
Toshiba	141	361	291	631	431	401	391	801	691
	621	571	471	461					
Vizio	061	111	101	091					

